




D-4135-SM
AIR BODY SAW

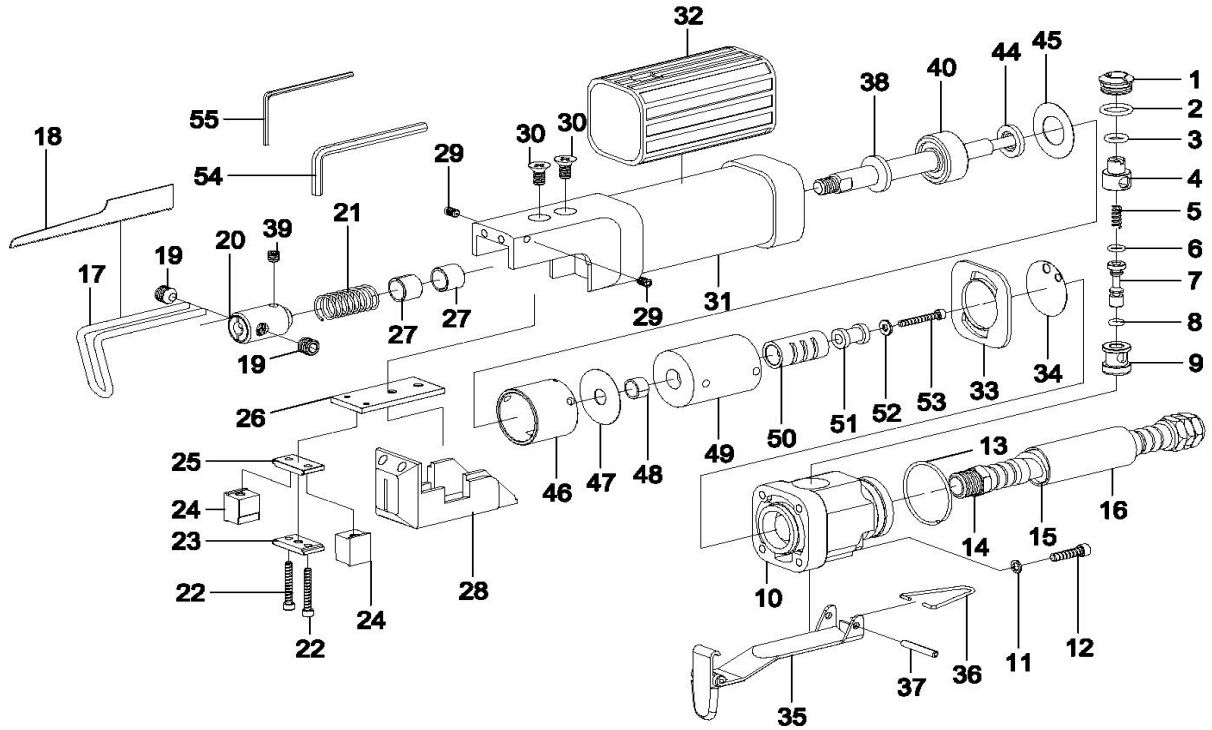

No.	Parts No.	Description	Q'ty
1	D41356612F-01	Valve Screw	1
2	D41356612F-02	O-Ring	1
3	D41356612F-03	O-Ring	1
4	D41356612F-04	Air Controller	1
5	D41356612F-05	Valve Spring	1
6	D41356612F-06	O-Ring	1
7	D41356612F-07	Valve Stem	1
8	D41356612F-08	O-Ring	1
9	D41356612F-09	Valve Bushing	1
10	D41356612F-10	valve Block	1
11	D41356612F-11	Lcok Washer	4
12	D41356612F-12	Cap Screw	4
13	D41356612F-13	Stop Ring	1
14	D41356612F-14	Air Hose Ass'y 1/4"	1
15	D41356612F-15	Sponge	1
16	D41356612F-16	Exhaust Hose	1
17	D41356612F-17	Work Guide	1
18	D41356612F-18	Blade	2
19	D41356612F-19	Set Screw	2
20	D41356612F-20	Blade Chuck	1
21	D41356612F-21	Spring	1
22	D41356612F-22	Cap Screw	2
23	D41356612F-23	Bridge	1
24	D41356612F-24	Blade Guide	2
25	D41356612F-25	Upper Wear Shoe	1
26	D41356612F-26	Guide Plate	1

No.	Parts No.	Description	Q'ty
27	D41356612F-27	Bushing	2
28	D41356612F-28	Chuck Cover	1
29	D41356612F-29	Set Screw	2
30	D41356612F-30	Screw	2
31	D41356612F-31	Housing	1
32	D41356612F-32	Housing Cover	1
33	D41356612F-33	Gasket	1
34	D41356612F-34	Packing	1
35	D41356612F-35	Safety Lever	1
36	D41356612F-36	Hanger	1
37	D41356612F-37	Spring Pin	1
38	D41356612F-38	Front Bumper	1
39	D41356612F-39	Set Screw	1
40	D41356612F-40	Piston Ass'y	1
44	D41356612F-44	Rear Bumper	1
45	D41356612F-45	Packing	1
46	D41356612F-46	Cylinder	1
47	D41356612F-47	Packing	1
48	D41356612F-48	Bushing	1
49	D41356612F-49	Valve Case	1
50	D41356612F-50	Valve Sleeve	1
51	D41356612F-51	Actuate Valve	1
52	D41356612F-52	Washer	1
53	D41356612F-53	Screw	1
54	D41356612F-54	Service Wrench (2mm)	1
55	D41356612F-55	Service Wrench (4mm)	1