




I-6630-SM  
AIR SMART ERASER

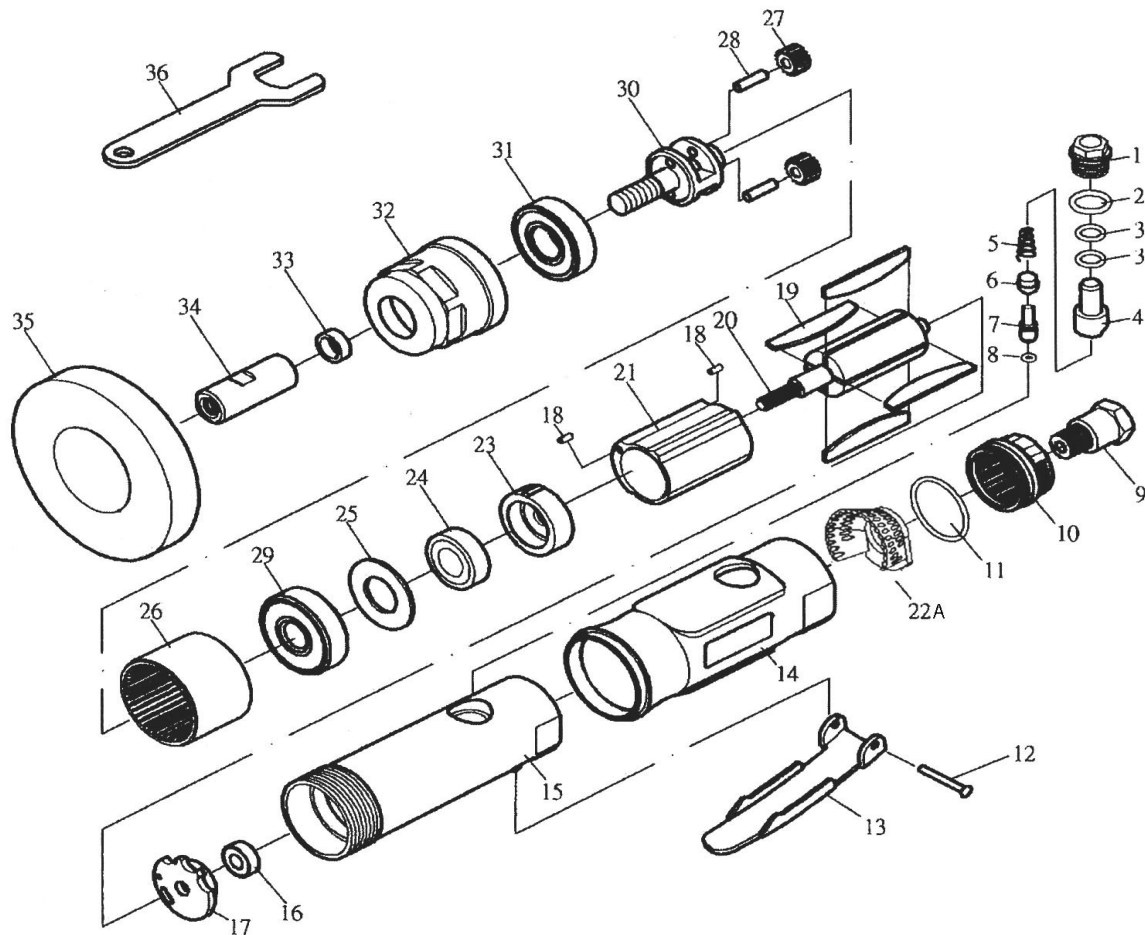

No.	Parts No.	Description	Q'ty
1	I66306634-01	Screw	1
2	I66306634-02	O-Ring (P12)	1
3	I66306634-03	O-Ring (P8)	2
4	I66306634-04	Air Regulator	1
5	I66306634-05	Spring	1
6	I66306634-06	Valve Stem Bushing	1
7	I66306634-07	Valve Stem	1
8	I66306634-08	O-Ring (3.5x1.4)	1
9	I66306634-09	Air Inlet	1
10	I66306634-10	Exhaust Sleeve	1
11	I66306634-11	O-Ring (26.7x1.78)	1
12	I66306634-12	Pin	1
13	I66306634-13	Lever	1
14	I66306634-14	Protecting Rubber	1
15	I66306634-15	Housing	1
16	I66306634-16	Ball Bearing	1
17	I66306634-17	Rear Plate	1
18	I66306634-18	Pin	2

No.	Parts No.	Description	Q'ty
19	I66306634-19	Rotor Blade	4
20	I66306634-20	Rotor	1
21	I66306634-21	Cylinder	1
22A	I66306634-22A	Cone Muffler	1
23	I66306634-23	Front Plate	1
24	I66306634-24	Bearing (608ZZ)	1
25	I66306634-25	Washer	1
26	I66306634-26	Gear Link (42T)	1
27	I66306634-27	Idler Gear	2
28	I66306634-28	Idler Gear Pin	2
29	I66306634-29	Bearing (6001Z)	1
30	I66306634-30	Gear Plate	1
31	I66306634-31	Bearing (6200ZZ)	1
32	I66306634-32	Clamp Nut	1
33	I66306634-33	Washer	1
34	I66306634-34	Shaft	1
35	I66306634-35	Eraser	1
36	I66306634-36	Stop Spanner (14mm)	1