



Ref.No.	Parts No.	Description
1	WPAST20001	Tank / Tank
2	WPAST20002	Adapter / Adaptor
3	WPAST20003	Winkeladapter / Angle Adaptor
4	WPAST20004	Einlassventil / Input Valve
5	WPAST20005	Manometer / Gauge
8	WPAST20008	Sicherheitsventil / Safety Valve
9	WPAST20009	Adapter / Adaptor
10	WPAST20010	Auslassventil / Output valve
11	WPAST20011	Überwurfmutter / Nut
12	WPAST20012	Auslassdüse / Output Nozzle